### Surge Protection

For comprehensive protection of a luminaire against electrical surges, surge protection shall be installed on the mains supply where required to protect luminaires and drivers from transient voltage damage.

**For warranty information visit unios.com/warranty**

Please read these installation instructions carefully before installing this luminaire. This product must be installed and maintained by a suitably qualified person/s in compliance with the latest applicable regulations and relevant legislation.

Unios does not warrant any claim based on defects or damage caused by misuse, improper installation, improper operation and/or modifications carried out by the purchaser or third parties. This luminaire will not be used as a 'Working light' during construction. This will result in the warranty of the luminaire to be void. For warranty duration, please refer to the data sheet.

## Cleaning

**Always clean carefully using a soft cloth and a ph-neutral, alcohol-free, non-abrasive cleaning cloth. Clean & Maintain the finish twice a year to avoid rust, oxidation or limescale deposits. If this entire surface is not cleaned correctly, the finish may become uneven.**

*Do not use abrasive pads, discs, sandpaper and/or high pressure hose/gun to clean the luminaire.*

## Disposal

Ensure correct disposal of this product (waste electrical and electronic equipment)





# Pandia

PENDANT LIGHT


| Base Codes | Small | Medium |
|---|---|---|
| | PANP0130 | PANP0250 |

**IP20**


| Class I | Material | Operating Temp | Install Person/s | Power |
|---|---|---|---|---|
| 220–240V ~ 50/60Hz | Aluminium | <35°C | 1x | 4-9 Watts |

**CAUTION – This product must be installed by a qualified installer**
*Please read instruction manual carefully before installing luminaire*

**Side View**

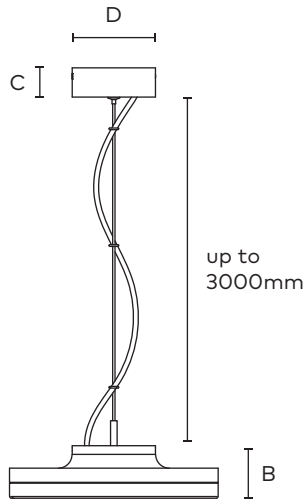


**Bottom View**

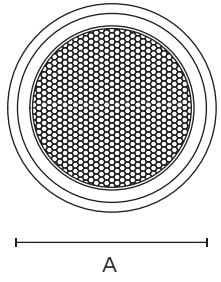


## Sizing Variations

| Product Code | A | B | C | D |
|---|---|---|---|---|
| PANP0130 | Ø 130 | 63 | 35 | Ø 70 |
| PANP0250 | Ø 250 | 63 | 35 | Ø 100 |

*All measurements are in millimetres.*

## Parts



2.5mm Hex Allen Key

2x




M4x25 Plug & Screw

## Product Installation


### CAUTION

**Switch off main electrical power prior to installing and powering this luminaire.**

*Do not open luminaire whilst the main electrical power is active.*

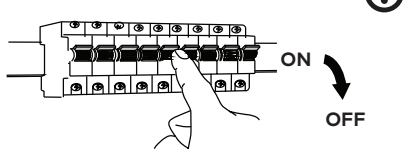



## Mounting Bracket

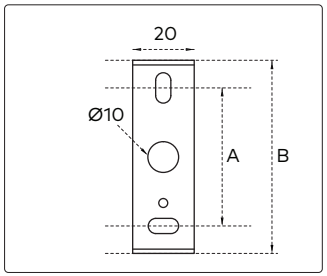



| Size | A | B |
|---|---|---|
| Small | 40 | 63 |
| Medium | 73 | 91 |


*All measurements are in millimetres.*

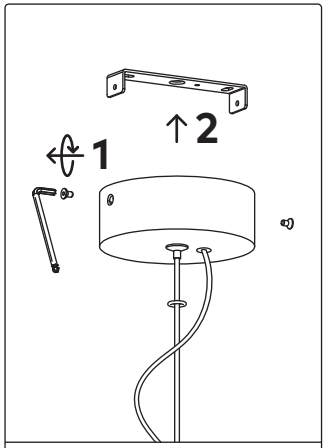



Remove mounting bracket from luminaire using provided 2.5mm Hex Allen Key

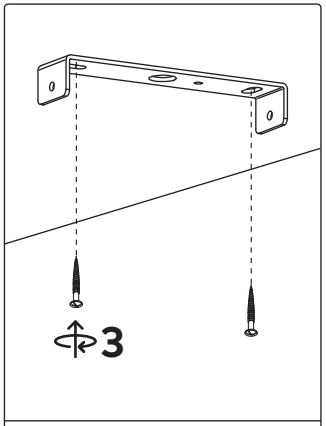



Fasten bracket to surface using supplied 2x M4 screws. Use supplied anchors when neccessary.

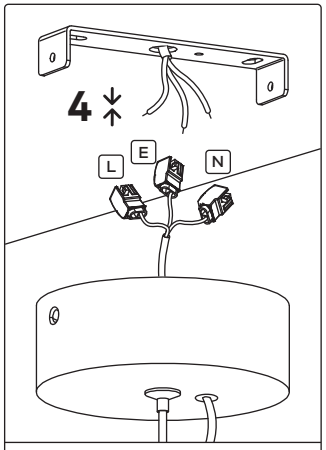


Match polarity and connect L-E-N to quick connectors (Refer to wiring)

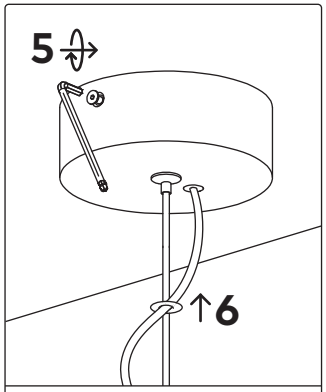


Attach luminaire to mounting bracket and tighten screws using provided allen key. Push Cable grip to release grip and feed excess cable through. Power cable can also feed through gland at the same time

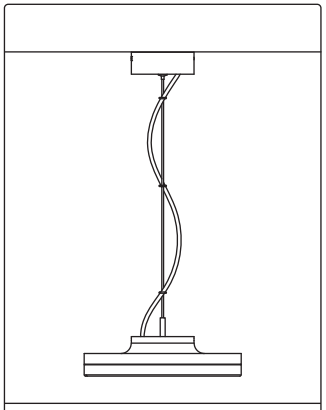


To complete the look of the Pendant as design intention, leave enough cable to slope in a helical look as above. Spacing cable clamps out evenly will aid in controlling the curves.





## Wiring

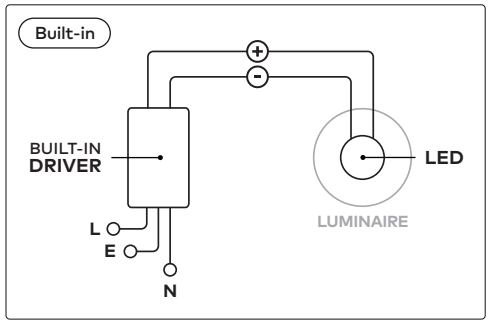


## Dimming

**This luminaire can be dimmed. Unios® recommends a phase-cut dimmer optimised for LED technology. For non-standard configurations refer to driver data sheet.**

*For full list of compatible drivers, see unios.com*

## Driver Compatibility

| Product Code | Output Power | Driving Current | Forward Voltage |
|---|---|---|---|
| PANP0130 | 4W | 100mA | 34-38V |
| PANP0250 | 9W | 260mA | 34-38V |